

5632-HT4

USER

INSTRUCTIONS



Melfred Borzall housings are built to last. They are machined from high quality, US alloy steel and feature contoured pockets to eliminate stress concentrations, reducing the risk of cracking. Our unique lid design allows for a dual method of securing the lid using both larger locking bolts and a roll pin to keep your investment safe in tough conditions. Further protection is provided by our one-of-a-kind built-in sonde cushioning. We've also made our housings easy to use by engraving the direction of drilling, housing and lid part numbers for easy identification. Include redesigned dual super nozzles which jet off of centerline to aid steering and you've got the top of the line. Here at Melfred Borzall, we've thought of everything; so you don't have to.

Important!

Read and understand the manufacturer's manual(s) for the directional drilling machine, locating equipment and all attachments including additional safety manual(s) provided with this tool.



Danger!

Do not use a pipe wrench to remove directly coupled tools. The rod could rotate causing the device to strike you causing serious injury or death.



Danger!

Stay clear of rotating drill stem and tooling. You can become caught in the rotating drill stem or tooling causing serious injury or death.



Danger!

Do not wear loose clothing. Loose articles of clothing can become tangled around the drill stem or tooling causing serious injury or death.




USER INSTRUCTIONS




Call before you
dig—dial 811
(USA only)
1-888-258-0808
(USA & Canada)

In The Box

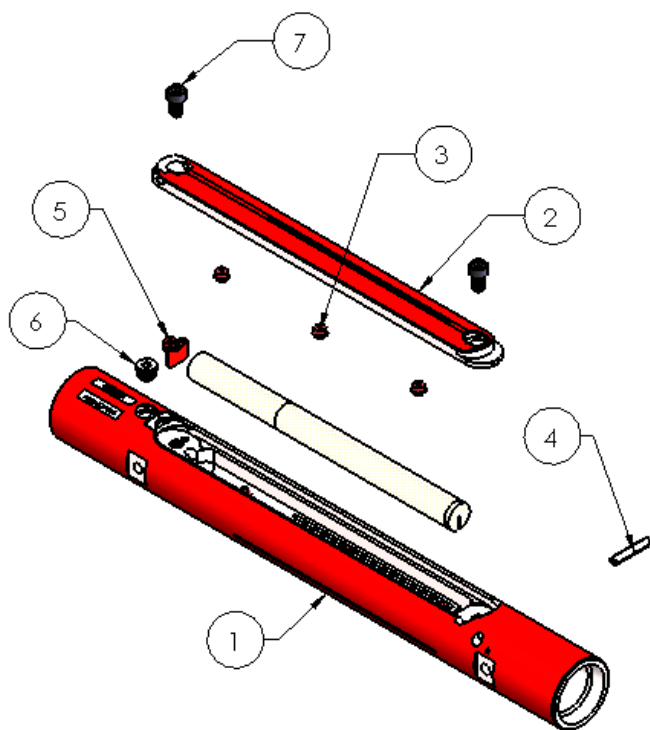


Housing Overview

USER INSTRUCTIONS

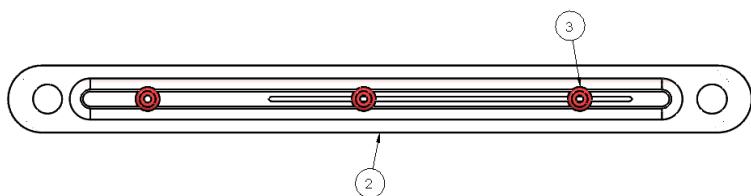

Lid and 5000-BUMPER1-SHORT

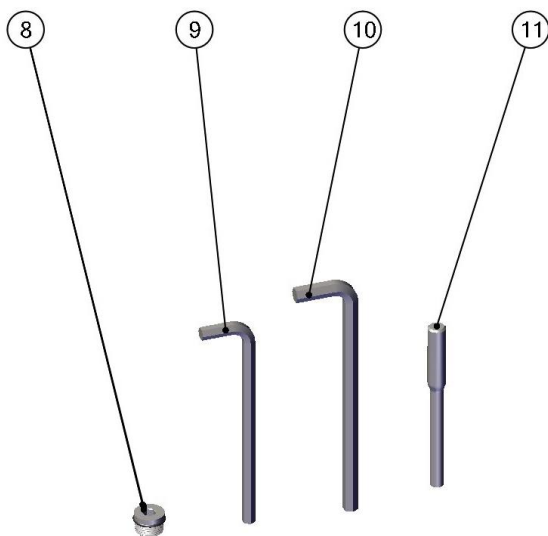


Loose parts

USER INSTRUCTIONS

| ID | Part Number | Description | REQ | SPARE |
|----|--------------------|------------------------------------|-----|-------|
| 1 | 5632-HT4 | Premium Sonde Housing | 1 | - |
| 2 | 5632-HT4-CP | Sonde Pocket Cover Plate | 1 | - |
| 3 | 5000-BUMPER1-SHORT | Sonde Pocket Bumper, Lid | 9 | - |
| 4 | RP-038-200 | Lid Locking Pin | 1 | 4 |
| 5 | 5000-BUMPER5 | Sonde End Bumper | 1 | - |
| 6 | PLUG-0.75-16 | Mud Boost Plug | 1 | - |
| 7 | SHCS1/2x3/4 | 1/2"-13x3/4" Socket Head Cap Screw | 2 | - |
| 8 | NOZ-0.25-0.75-16 | Mud Boost Nozzle | - | 1 |
| 9 | AW-5/16 | 5/16" Allen Wrench | - | 1 |
| 10 | AW-3/8 | 3/8" Allen Wrench | - | 1 |
| 11 | PUNCH-RP-038 | Roll Pin Punch | - | 1 |

USER INSTRUCTIONS

External Features

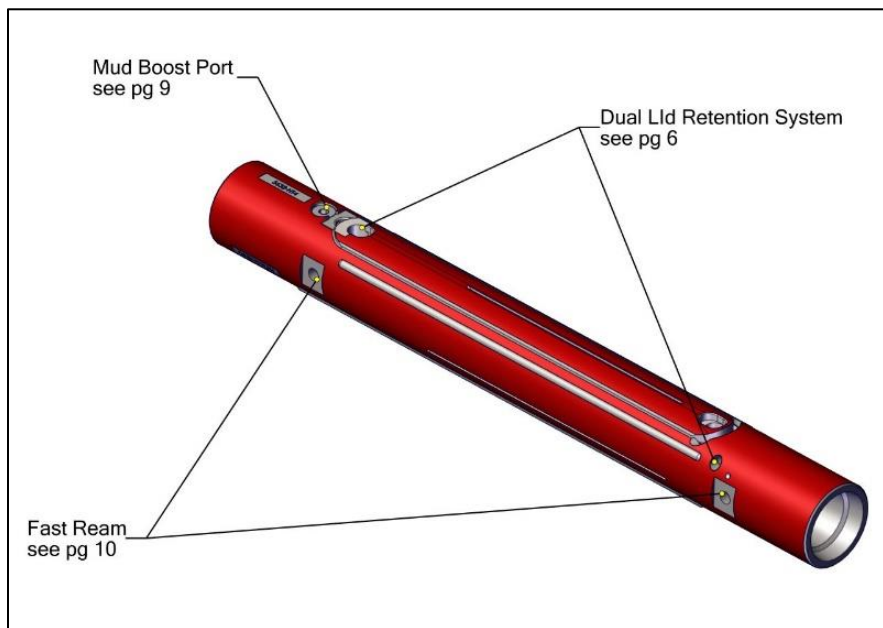

USER INSTRUCTIONS

General Precaution

1. Lock out the drilling machine, following the manufacturer's instructions, before doing any work to tools or drill stem.



Dual Lid Retention





This housing utilizes both bolts and a roll pin as a redundant method of retaining the lid. The bolts do not clamp the lid but prevent it from sliding and uncovering the tabs at either end. The pin also prevents the lid from sliding and uncovering the tabs.

1. Remove Lid Locking Pin (Item 4) using PUNCH-RP-038 (Item 11) and a hammer to drive the punch.





Note: The lid pin hole also serves as a cleanout port to remove any debris that may prevent the lid from sliding forward.

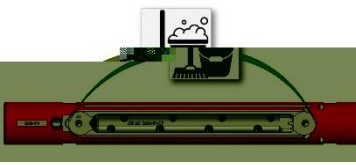

USER INSTRUCTIONS


| | |
|---|---|
| <p>2. Remove the lid bolts. Then remove the lid by sliding it forward and prying up from the back.</p> |  |
| <p>3. 5000-BUMPER5 (Item 5) is PRE-INSTALLED in the housing.</p> <p>Install the transmitter so that the indexing notch in the transmitter seats around the mating tab in the housing pocket. When properly secured, the sonde will resist rotation within the pocket.</p> |  |
| <p>4. Ensure that the bolt holes are completely clear of any debris as unclean holes can prevent bolts from properly securing the lid.</p> |  |
| <p>5. Check that transmitter and bumper assembly are seated properly. When properly secured, the sonde will resist rotation within the pocket.</p> |  |

USER INSTRUCTIONS
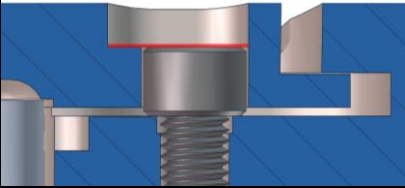
| | |
|---|--|
| <p>6. Reinstall lid by installing forward tab into housing, rotating lid down, and sliding lid towards rear of the housing.</p> |  |
| <p>7. Install the bolts using the provided 3/8" Allen Wrench (Item 10). Tighten each bolt to the recommended torque of 124lb-ft.</p> <p>Replace bolts with new after 10 uses.</p> |  |
| <p>8. Ensure that the bolts are properly seated by verifying that the bolt head is level with the machined shelf beside the hole.</p> |  |
| <p>9. Locate the lid pin hole. It will be just forward of the lid opening, running from the 3 o'clock to 9 o'clock position.</p> <p>Align the pin with the hole and tap in with a hammer.</p> |  |

USER INSTRUCTIONS

10. Tap pin into place until pin is sub-flush on both ends.

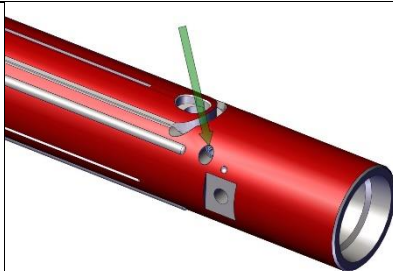

Mud Boost Port

The mud boost port, located just behind the sonde lid, provides additional mud flow during pullback.

1. The housing is shipped with a plug installed (Item 6, PLUG-0.75-16). To utilize this feature, the plug must be removed, and the mud boost nozzle installed (Item 8, NOZ-0.25-0.75-16).



2. Using the supplied 5/16" Allen wrench, unscrew the plug.



3. Install Item 8 (NOZ-0.25-0.75-16) by screwing into the port using the 5/16" Allen wrench.




USER INSTRUCTIONS

FastReam




Your Melfred Borzall housing includes the Patented FastReam feature. This allows quick attachment of Tornado-style reamer blades to enable back reaming without removing the housing and attaching a dedicated reamer.

There are several different styles and sizes of blades to use. The blades can be sized differently to progressively cut a larger hole, can be the same size, or a single blade can be used.



When using the FastReam feature, Melfred Borzall recommends using a FastReam adapter that provides additional Mud Boost ports.

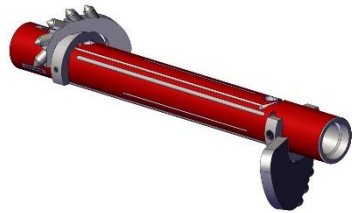

USER INSTRUCTIONS
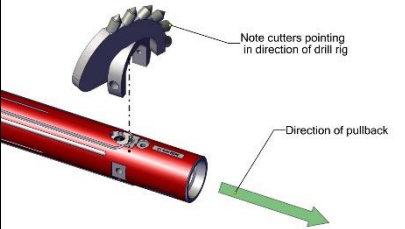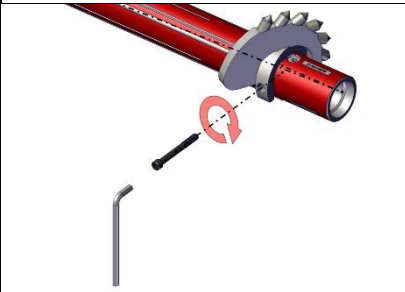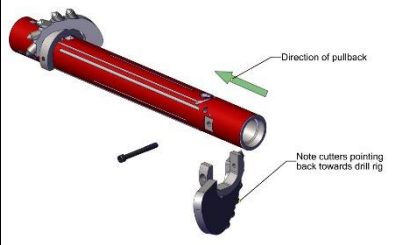
| | |
|--|--|
| <p>1. First install rear blade. Ensure cutters are facing towards the rear of the housing (back towards drill rig). Install FastReam blade from the top of the housing so that cutters are just in front of the mud boost port. The blade should fit into all three notched flats.</p> |  |
| <p>2. Secure blade using the cross bolt through the FastReam blade and hole in housing. Use the correct size Allen wrench to tighten to 81ft-lbs.</p> |  |
| <p>3. If desired, install the front FastReam blade. Ensure cutters are facing towards the rear of the housing (back towards drill rig). Install FastReam blade from the bottom of the housing. The blade should fit into all three notched flats.</p> |  |

USER INSTRUCTIONS
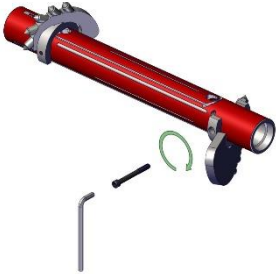
| | |
|---|---|
| <p>4. Secure blade using the cross bolt through the FastReam blade and hole in housing. Use the correct size Allen wrench to tighten to 81ft-lbs.</p> |  |
| <p>After completion of the bore, remove the components from the housing body and clean all parts thoroughly.</p> |  |